

# ULTRAFAST LASER PULSE TAILORING IN PURE WATER

*G. R. Fournier*

DRDC Valcartier 2459 Pie-XI Blvd. North, Quebec, Quebec, Canada G3J-1X5, e-mail: georges.fournier@drdc-rddc.gc.ca

## ABSTRACT

Some experimental measurements of femtosecond laser pulses propagating in water have shown an apparent absorption coefficient that is much smaller by more than an order of magnitude than even that measured using picosecond pulses in the same water with the same apparatus. The effect was found to be linear since the power density in the experiments was kept well below the threshold of any known non-linear mechanism. The lasers used in the experiments had transform limited pulses centered around 800 nm. The measured effect can be explained by viewing the phenomenon from the spectral perspective where the coherent laser pulse spectrum can be considered as inhomogeneous and subjected to a form of hole burning by the absorbing medium. This means that the absorption eats away the central portion of the laser spectrum and leaves two separate spectra that beat against one another. This way of looking at the process resolves also the apparently contradictory results to that of Fox and Osterberg, which were obtained by workers at the University of Nebraska and more recently at Texas A&M. An interesting consequence of this spectral analysis is that the apparent reduction in absorption can be directly related to the initial and evolving temporal pulse shape of the laser. The absorption curve can thus be used to infer details of the laser pulse shape. It also turns out that the temporal shape and breakup of the laser pulse can be modified in a controllable fashion by pure water or with the controlled addition of absorbing dyes. This opens up the possibility of tailoring the temporal evolution as a function of penetration distance of femtosecond laser pulses. This tailoring capability is relevant to the problem of increasing the reliability of free space underwater communication.

**Keywords:** propagation, absorption, underwater, water, femtosecond, laser, pulse shaping.

Report Documentation Page		Form Approved OMB No. 0704-0188
Public reporting burden for the collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to a penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.		
1. REPORT DATE <b>29 MAY 2009</b>	2. REPORT TYPE	3. DATES COVERED <b>00-00-2009 to 00-00-2009</b>
4. TITLE AND SUBTITLE <b>Ultrafast Laser Pulse Tailoring in Pure Water</b>		5a. CONTRACT NUMBER
		5b. GRANT NUMBER
		5c. PROGRAM ELEMENT NUMBER
6. AUTHOR(S)	5d. PROJECT NUMBER	
	5e. TASK NUMBER	
	5f. WORK UNIT NUMBER	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) <b>Defence R&amp;D Canada - Valcartier, 2459 de la Bravoure Road, Quebec, Quebec G3J 1X5 ,</b>		8. PERFORMING ORGANIZATION REPORT NUMBER
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)		10. SPONSOR/MONITOR'S ACRONYM(S)
		11. SPONSOR/MONITOR'S REPORT NUMBER(S)
12. DISTRIBUTION/AVAILABILITY STATEMENT <b>Approved for public release; distribution unlimited</b>		
13. SUPPLEMENTARY NOTES		
14. ABSTRACT <p><b>Some experimental measurements of femtosecond laser pulses propagating in water have shown an apparent absorption coefficient that is much smaller by more than an order of magnitude than even that measured using picosecond pulses in the same water with the same apparatus. The effect was found to be linear since the power density in the experiments was kept well below the threshold of any known non-linear mechanism. The lasers used in the experiments had transform limited pulses centered around 800 nm. The measured effect can be explained by viewing the phenomenon from the spectral perspective where the coherent laser pulse spectrum can be considered as inhomogeneous and subjected to a form of hole burning by the absorbing medium. This means that the absorption eats away the central portion of the laser spectrum and leaves two separate spectra that beat against one another. This way of looking at the process resolves also the apparently contradictory results to that of Fox and Osterberg, which were obtained by working at the University of Nebraska and more recently at Texas A&amp;M. An interesting consequence of this spectral analysis is that the apparent reduction in absorption can be directly related to the initial and evolving temporal pulse shape of the laser. The absorption curve can thus be used to infer details of the laser pulse shape. It also turns out that the temporal shape and breakup of the laser pulse can be modified in a controllable fashion by pure water or with the controlled addition of absorbing dyes. This opens up the possibility of tailoring the temporal evolution as a function of penetration distance of femtosecond laser pulses. This tailoring capability is relevant to the problem of increasing the reliability of free space underwater communication.</b></p>		
15. SUBJECT TERMS		

16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT <b>Same as Report (SAR)</b>	18. NUMBER OF PAGES <b>5</b>	19a. NAME OF RESPONSIBLE PERSON
a. REPORT <b>unclassified</b>	b. ABSTRACT <b>unclassified</b>	c. THIS PAGE <b>unclassified</b>			

DEFENCE **R&D** DÉFENSE

## Ultrafast Laser Pulse Tailoring in pure water

G.R. Fournier

DRDC-Valcartier, 2459 Pie-XI Blvd. North, Quebec, Quebec, Canada, G3J 1X5



Defence R&D  
Canada

R et D pour la défense  
Canada

Canada



## Ultrafast laser pulse tailoring in pure water


- It was conclusively shown two years ago by very careful experimental measurements by Anna Fox and Ulf Osterberg that 60 femtosecond laser pulses centered at 800 nm propagating in water have an anomalous absorption that is much smaller by more than two orders of magnitude than even picosecond pulses at the same wavelength.
- Surprisingly the effect was found to be linear as the power density in the experiments was kept well below the threshold of any known non-linear mechanism.
- This effect depends only on the finite response time of water.
- A simple theoretical model relating temporal pulse shape to spectrally broadened absorption is proposed and formulae are derived that explain most of the current experimental results.

Defence R&D Canada • R et D pour la défense, Canada



## Ultrafast laser pulse tailoring in pure water

**What is the source of the water response time and  
absorption spectrum?**

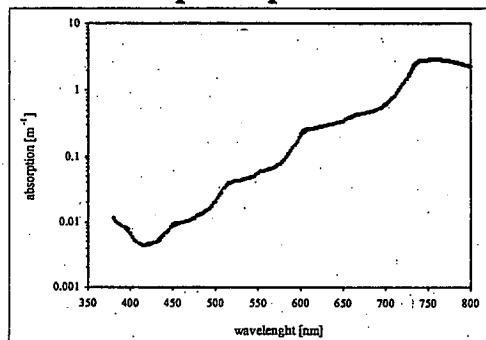

The absorption coefficient of pure water at 22°C as a function of wavelength from 380 nm to 800 nm. The solid line is the fit using a set of Gaussians whose parameters are given in Table 1 and the dots are the experimental data of (Pope and Fry 1997: 380 to 727.5 nm, Kou et al. 1993: 728 to 800 nm). Note the broad quadratic shaped minimum around 420 nm.

Defence R&D Canada • R et D pour la défense, Canada



## Ultrafast laser pulse tailoring in pure water

**What is the mechanism?**

- Part of the effect can be explained by viewing the phenomenon from the spectral perspective where the coherent laser pulse spectrum can be considered as inhomogeneous and subjected to a form of hole burning by the absorbing medium. Note that for femtosecond pulses the spectrum is very broad and is the Fourier transform of the temporal pulse shape.
- This means that for water, the absorption eats away preferentially the long wavelength side of the laser spectrum.
- As the pulse progresses further in the medium the leftover laser pulse power shifts towards the green and blue and the rate of absorption as a function of distance slows down giving rise to the apparent reduction in absorption.

Defence R&D Canada • R et D pour la défense, Canada



## Ultrafast laser pulse tailoring in pure water

### A simple physics based laser pulse shape.

- For a single pulse or low repetition rate operation any medium with optical gain enclosed between mirrors in a cavity will behave in general as follows:
- The initial portion of the pulse will be given in general by an exponential amplification with a rise time that will come to saturate at a constant level if the power source feeding the population inversion is constant and the lower state is emptied fast enough.
- Once the power source stops, the inversion will disappear and the radiation will decay exponentially at a rate determined in general by the cavity length and mirror reflectivity.

Defence R&D Canada • R et D pour la défense, Canada



## Ultrafast laser pulse tailoring in pure water

### A simple physics based laser pulse shape.

The previously described behavior can be captured by the following model equation:

$$\frac{I(t)}{I_0} = \frac{\gamma(\alpha + \gamma)}{\alpha} (1 - e^{-\alpha t}) e^{-\gamma t} = \frac{\gamma(\alpha + \gamma)}{\alpha} (e^{-\gamma t} - e^{-(\alpha + \gamma)t})$$

This equation can be used to obtain flexible laser pulse shapes based on the physics of the laser cavity.

Defence R&D Canada • R et D pour la défense, Canada



## Ultrafast laser pulse tailoring in pure water

### Deriving the laser frequency spectrum.

$$\int_0^{\infty} z^{1/2} e^{-z/2} e^{-i\omega_1 z} dz = \frac{1}{(1+i2\omega_1)^{3/2}} \quad \leftarrow \omega_1 = \frac{2\pi\nu}{\beta} = \frac{2\pi c}{\beta\lambda} = \frac{2\pi c T_p}{2.44644\lambda}$$

The power normalized power spectrum is therefore:

$$I(\omega_1) = \frac{1}{[(1+4(\omega_1)^2)^{3/2}]}$$

Note carefully that the frequency asymptote for a Gamma pulse is an inverse cube function.

In the other limit of a pure exponential pulse the asymptote would be an inverse square.

The full function will therefore span the space between both these limits. This is a much slower decay than for a Gaussian.

Defence R&D Canada • R et D pour la défense, Canada



## Ultrafast laser pulse tailoring in pure water

### Deriving the laser frequency spectrum.

Note that the full width at half maximum of the normalized and relative frequency spectra are:

$$\Delta\omega_{1/2\max} = 2 \sqrt{\frac{(2^{2/3}-1)}{4}} = 0.76642 \Rightarrow \Delta\omega_{1/2\max} = 0.76642 \frac{2.44644}{T_p} = \frac{1.875}{T_p}$$

According to the above, the total absorption of an ultrafast pulse by water can be evaluated numerically by spectrally integrating the spectrum of the laser pulse by the wavelength dependant absorption of pure water.

Defence R&D Canada • R et D pour la défense, Canada